

ROTHENBERGER

ROMAX 4000

ROMAX 4000
Charger / Battery




DE Bedienungsanleitung
EN Instructions for use
FR Instruction d'utilisation
ES Instrucciones de uso
IT Istruzioni d'uso
NL Gebruiksaanwijzing
PT Instruções de serviço
DA Brugsanvisning
SV Bruksanvisning
NO Bruksanvisning
FI Käyttöohje
PL Instrukcja obsługi
CS Návod k používání
TR Kullanım kilavuzu

HU Kezelési útmutató
SL Navodilo za uporabo
SK Návod na obsluhu
HR Upute za uporabu
BG Инструкция за експлоатация
RO Manualul de utilizare
ET Kasutusjuhend läbi
LT Naudojimo instrukcija
LV Lietošanas pamācība
EL Οδηγίες χρήσεως
RU Инструкция по использованию
AR دليل الاستخدام
JA マニュアル



rothenberger.com

No.: 1200001764 ROMAX 4000 basic

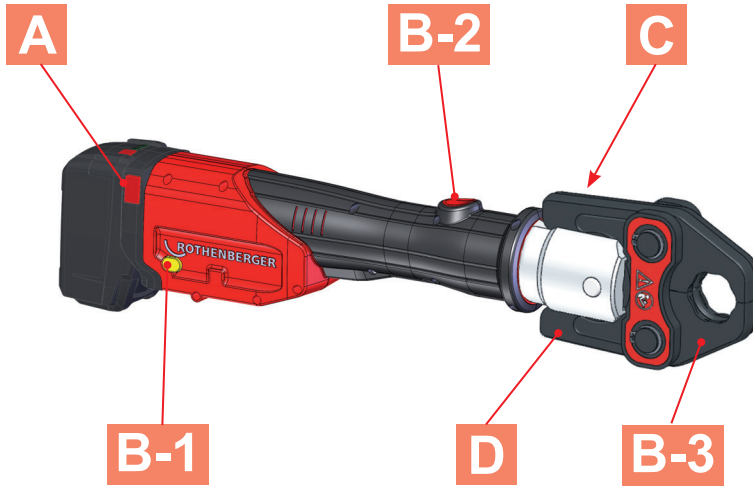


A Changing Battery



B Emergency-Off / ON-Switch / Positions



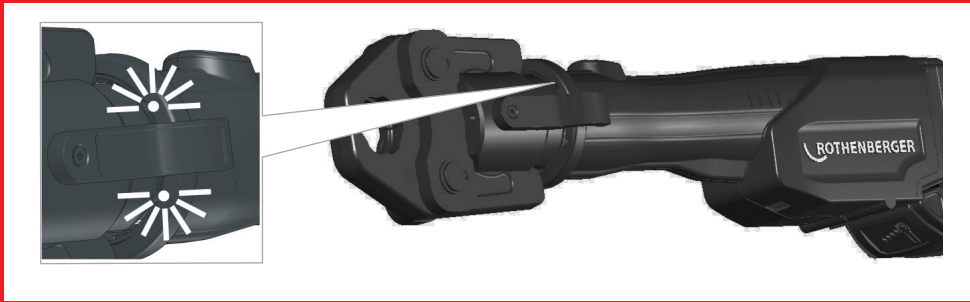

Insert Press Jaw D

<p>1</p> <p>Diagram 1 shows the red press jaw being inserted into the handle. Red arrows indicate the direction of insertion.</p>	<p>Diagram 1 continued shows the red press jaw fully inserted into the handle. Red arrows indicate the direction of insertion.</p>
<p>2</p> <p>Diagram 2 shows the red press jaw being pushed into the handle. Red arrows indicate the direction of pushing.</p>	<p>Diagram 2 continued shows the red press jaw fully seated in the handle. Red arrows indicate the direction of pushing.</p>
<p>3</p> <p>Diagram 3 shows the red press jaw being rotated into the handle. Red arrows indicate the direction of rotation.</p>	<p>Diagram 3 continued shows the red press jaw fully rotated and locked in the handle. Red arrows indicate the direction of rotation.</p>