

ROTHENBERGER

ROMAX 4000

ROMAX 4000
Charger / Battery




DE Bedienungsanleitung
EN Instructions for use
FR Instruction d'utilisation
ES Instrucciones de uso
IT Istruzioni d'uso
NL Gebruiksaanwijzing
PT Instruções de serviço
DA Brugsanvisning
SV Bruksanvisning
NO Bruksanvisning
FI Käyttöohje
PL Instrukcja obsługi
CS Návod k používání
TR Kullanım kilavuzu

HU Kezelési útmutató
SL Navodilo za uporabo
SK Návod na obsluhu
HR Upute za uporabu
BG Инструкция за експлоатация
RO Manualul de utilizare
ET Kasutusjuhend läbi
LT Naudojimo instrukcija
LV Lietošanas pamācība
EL Οδηγίες χρήσεως
RU Инструкция по использованию
AR دليل الاستخدام
JA マニュアル



rothenberger.com

No.: 1200001764 ROMAX 4000 basic

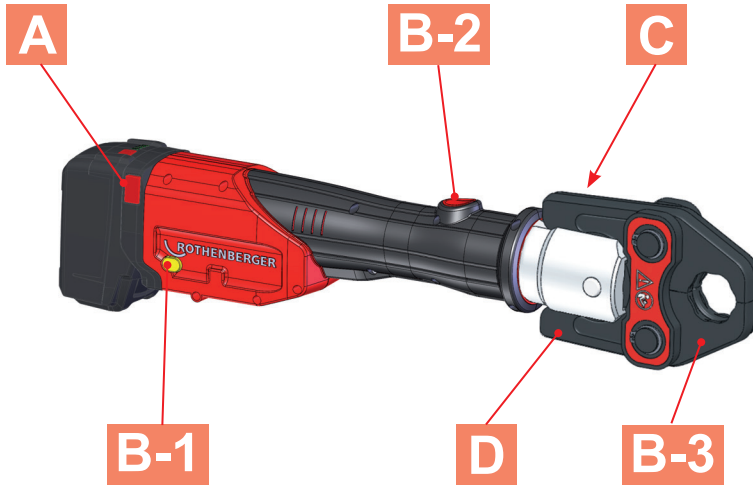

A Changing Battery



B Emergency-Off / ON-Switch / Positions





Insert Press Jaw D

<p>1</p> <p>Diagram 1 shows the red release lever on the side of the handle being moved downwards, as indicated by a red arrow.</p>	<p>Diagram 1 continued shows the red release lever being moved upwards, as indicated by a red arrow.</p>
<p>2</p> <p>Diagram 2 shows the red press jaw being inserted into the handle's opening, as indicated by a red arrow.</p>	<p>Diagram 2 continued shows the red press jaw fully seated inside the handle.</p>
<p>3</p> <p>Diagram 3 shows the red release lever being moved downwards, as indicated by a red arrow.</p>	<p>Diagram 3 continued shows the red release lever being moved upwards, as indicated by a red arrow.</p>