

ROCAM 4 Plus Charger / Battery

ROCAM 4 Plus



DE Bedienungsanleitung
EN Instructions for use
FR Instruction d'utilisation
ES Instrucciones de uso
IT Istruzioni d'uso
NL Gebruiksaanwijzing
DA Brugsanvisning

SV Bruksanvisning
FI Käyttöohje
PL Instrukcja obsługi
TR Kullanım kılavuzu
HU Kezelési útmutató
RU Инструкция по использованию
JA マニュアル





A Overview

no. 1200001911- basic




B Replace the reel

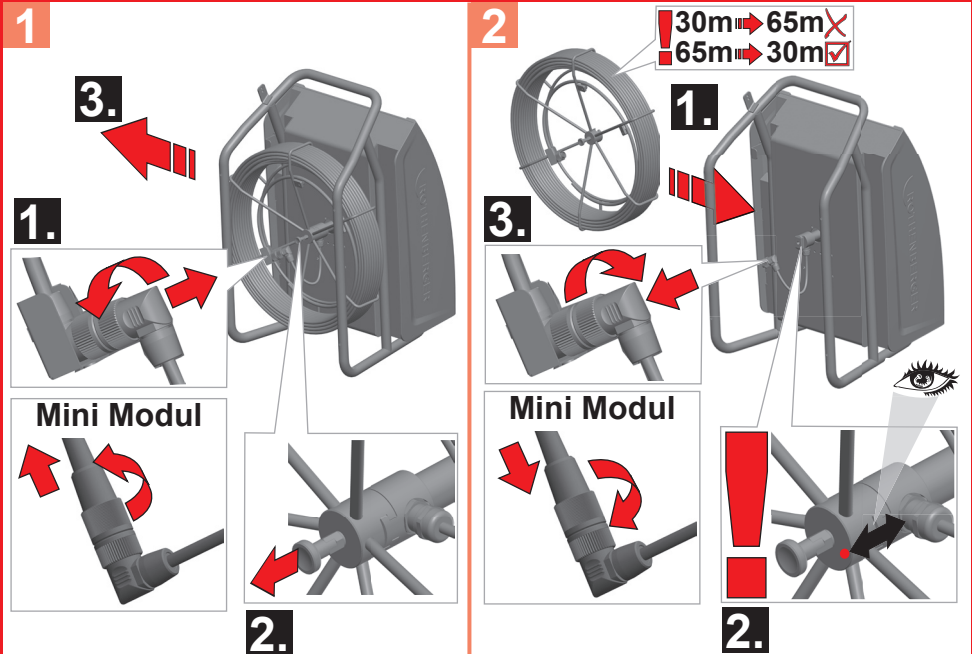

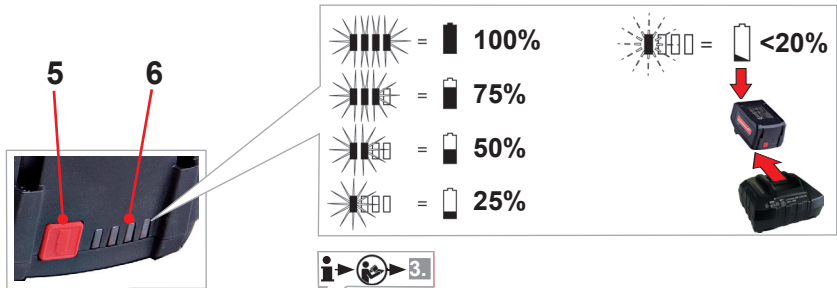

| Battery | art. no. | U | C | W | Ic | t |
|-----------------|------------|------|--------|-------|-----|---------|
| RO BP18/2 | 1000001652 | 18 V | 2,0 Ah | 400 g | 4 A | 40 min. |
| RO BP18/4 | 1000001653 | 18 V | 4,0 Ah | 670 g | 8 A | 80 min |
| RO BP18/4 Li-HD | 1000002548 | 18 V | 4,0 Ah | 584 g | 3 A | 80 min |
| RO BP18/8 Li-HD | 1000002549 | 18 V | 8,0 Ah | 977 g | 3 A | 160 min |

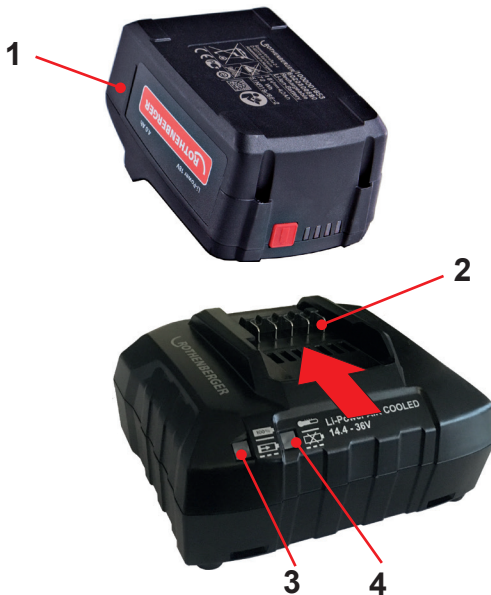

| Charger | art. no. | U1 | f1 | P1 | U2 | I2 | Nc | W |
|--------------------|------------|------------|-----------|-----|----------|----------|--------|------|
| RO BC14/36 EU | 1000001654 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 AUS | 1000001655 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 USA CND | 1000001656 | 115V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 UK | 1000001691 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |
| RO BC14/36 JP | 1000003033 | 220 - 240V | 50 - 60Hz | 85W | 14 - 42V | 3,0 A DC | 4 - 10 | 600g |

fig. charger and battery similar