


ROMAX AC ECO



DE Bedienungsanleitung
EN Instructions for use
FR Instruction d'utilisation
ES Instrucciones de uso
IT Istruzioni d'uso
NL Gebruiksaanwijzing
PT Instruções de serviço
DA Brugsanvisning
SV Bruksanvisning
NO Bruksanvisning

FI Käyttöohje
PL Instrukcja obsługi
CZ Návod k používání
TR Kullanım kılavuzu
HU Kezelési útmutató
SL Navodilo za uporabo
BG Инструкция за експлоатация
EL Οδηγίες χρήσεως
RU Инструкция по использованию



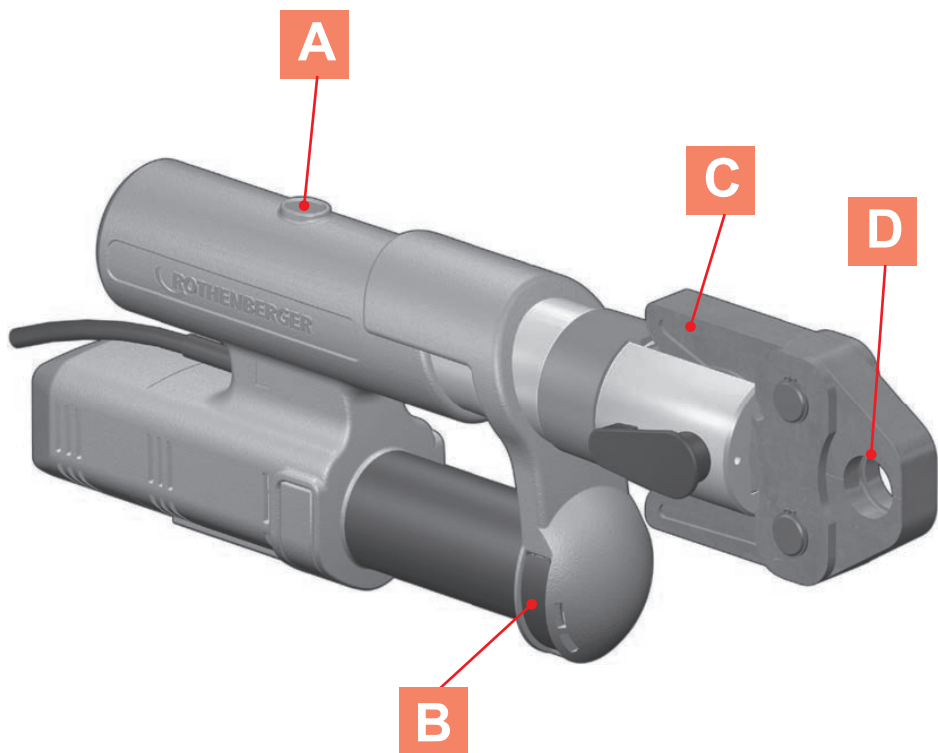



Art. no.: 15705 ROMAX AC ECO Basic Set, 230V, Typ C

Art. no.: 015705Z ROMAX AC ECO Basic Set, 230V, Typ J







Art. no.: 15706 ROMAX AC ECO Basic Set, 110V, Typ A

A Emergency-Off




B ON-Switch

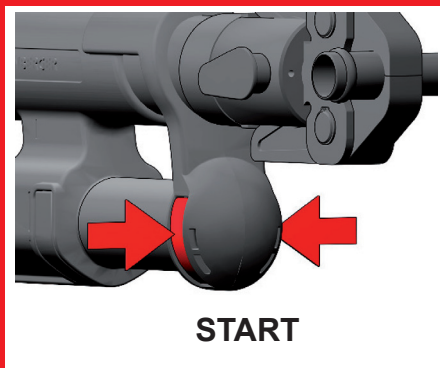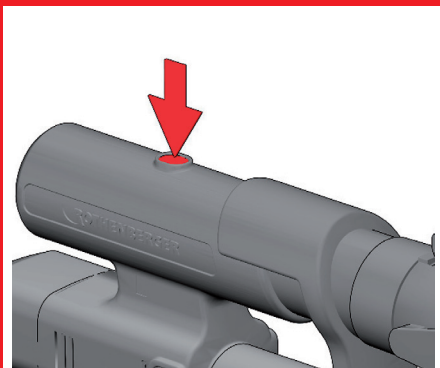

Insert Press Jaw C

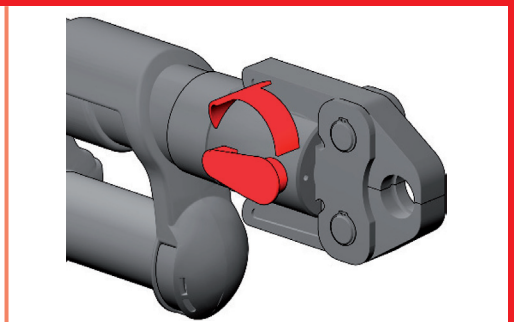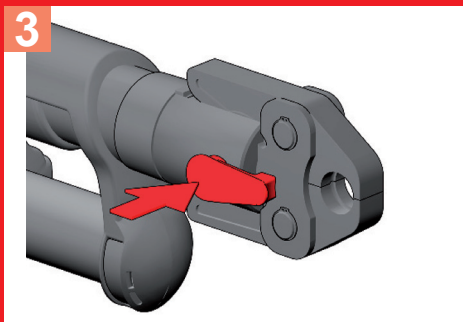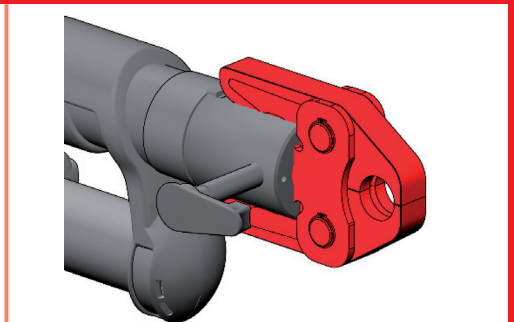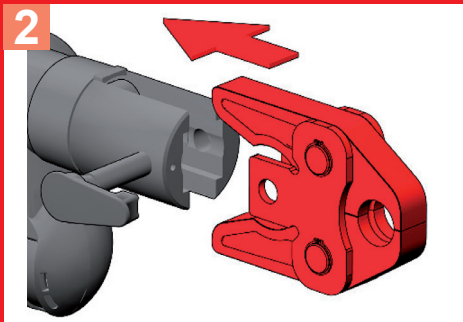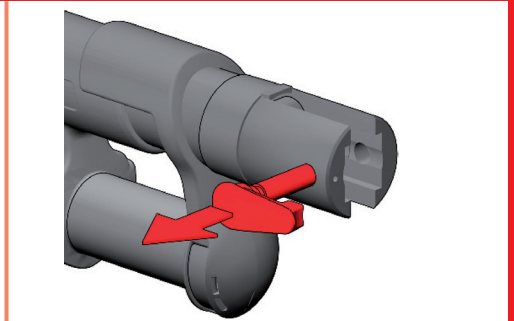
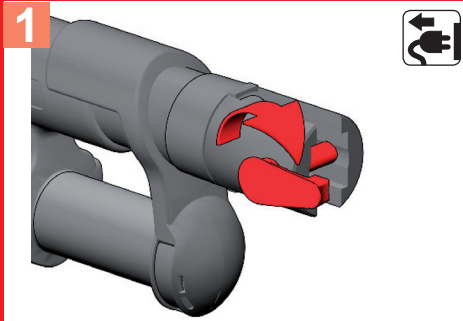


Various Positions D

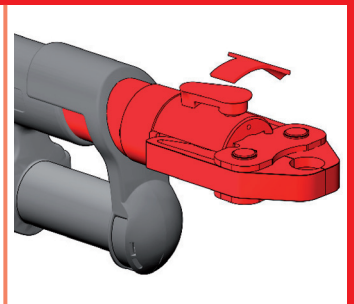
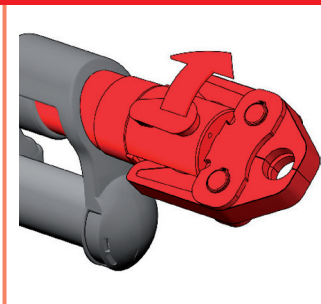
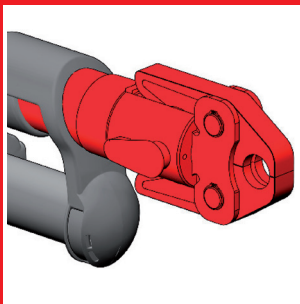


D Operating

1

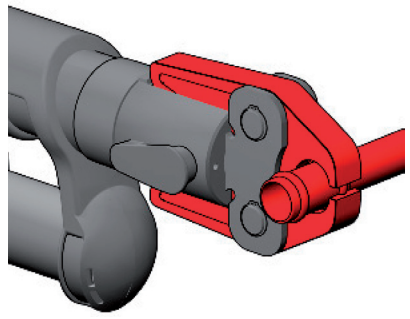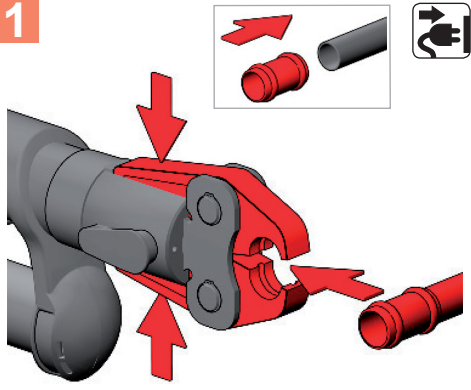

2

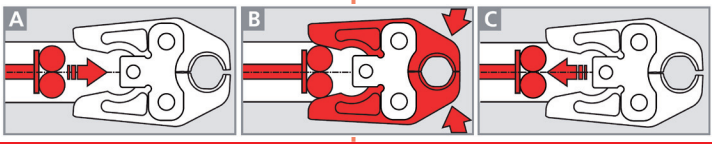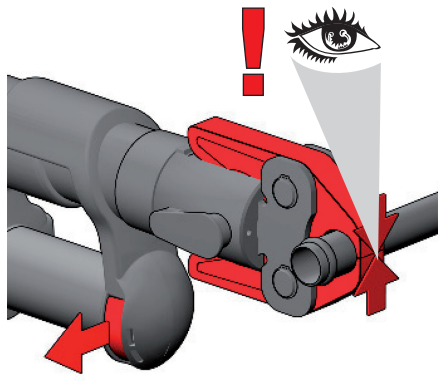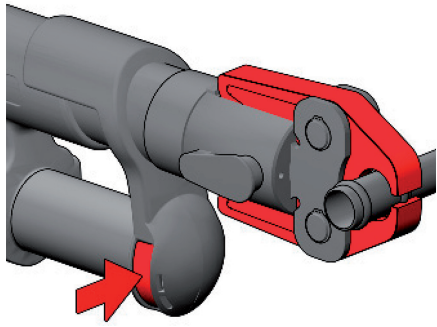

3

