


ROMAX AC ECO



DE Bedienungsanleitung
EN Instructions for use
FR Instruction d'utilisation
ES Instrucciones de uso
IT Istruzioni d'uso
NL Gebruiksaanwijzing
PT Instruções de serviço
DA Brugsanvisning
SV Bruksanvisning
NO Bruksanvisning
FI Käyttöohje

PL Instrukcja obsługi
CS Návod k používání
TR Kullanım kılavuzu
HU Kezelési útmutató
SL Navodilo za uporabo
BG Инструкция за експлоатация
ET Kasutusjuhend läbi
LT Naudojimo instrukcija
LV Lietošanas pamācība
EL Οδηγίες χρήσεως
RU Инструкция по использованию



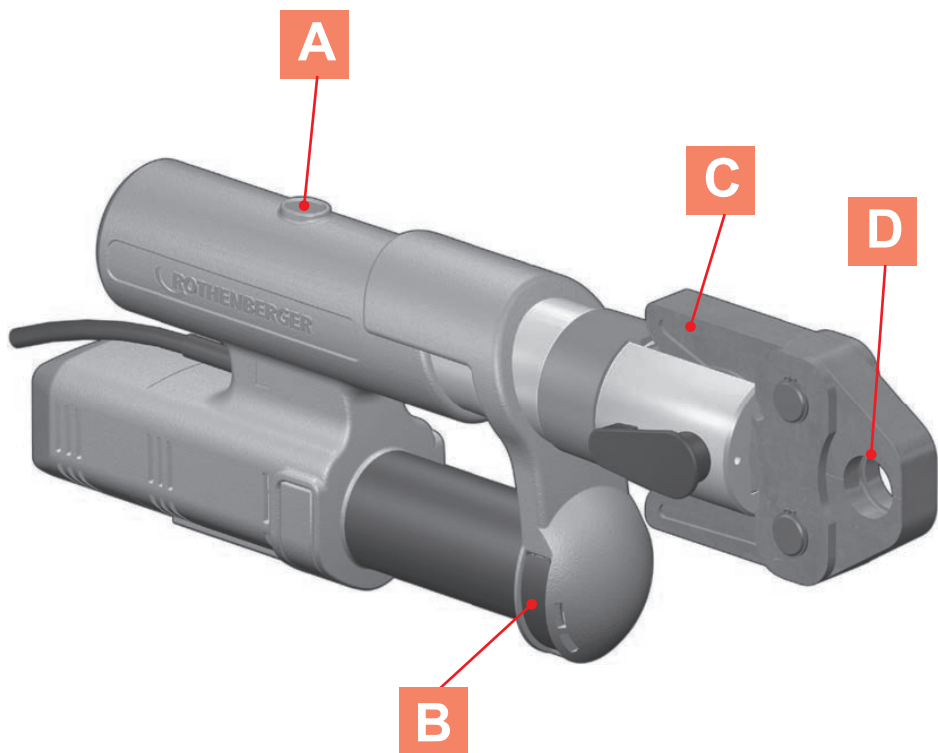


Art. no.: 15705 ROMAX AC ECO Basic Set, 230V, Typ C


Art. no.: 015705Z ROMAX AC ECO Basic Set, 230V, Typ J

Art. no.: 15706 ROMAX AC ECO Basic Set, 110V, Typ A

A Emergency-Off


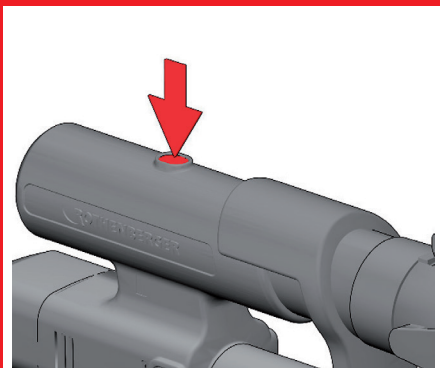


B ON-Switch


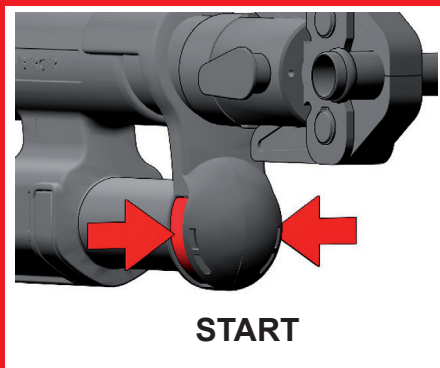


Insert Press Jaw C



1

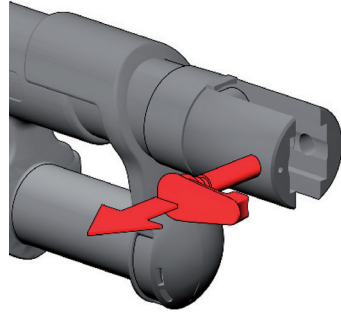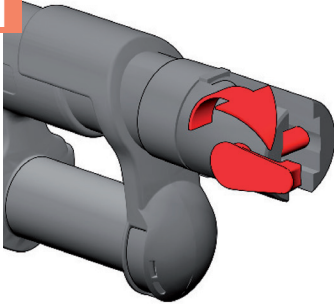




2

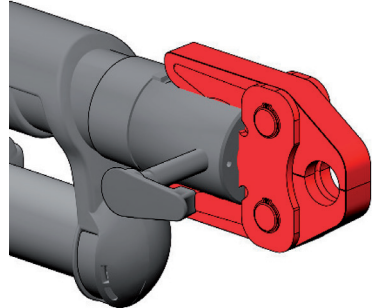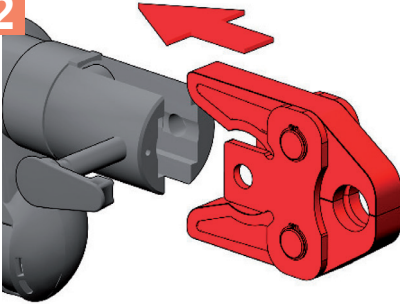

3

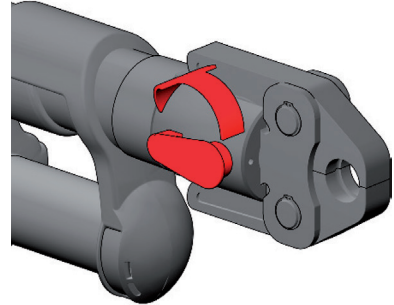
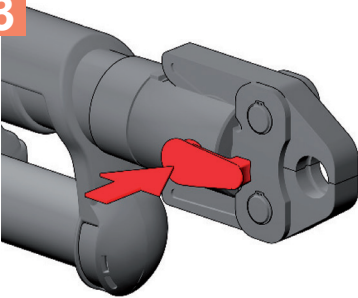


Various Positions D

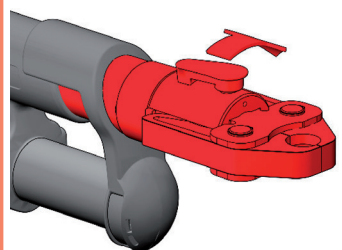
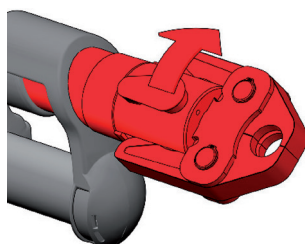
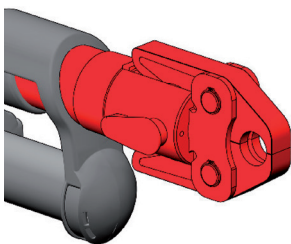


D Operating

1

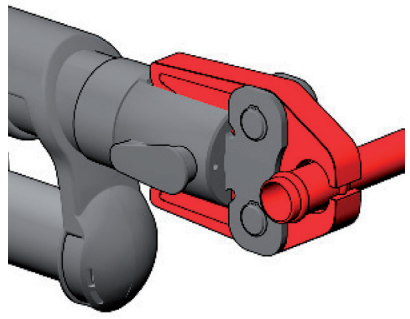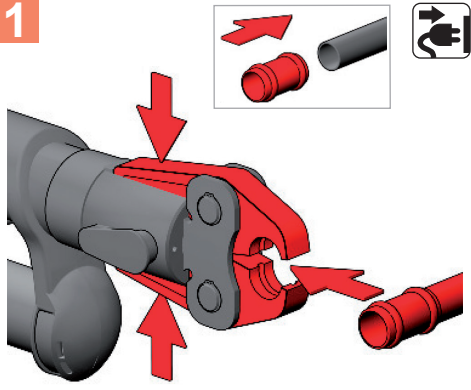

2

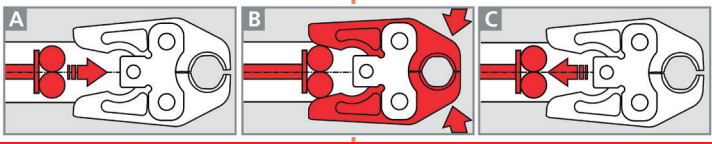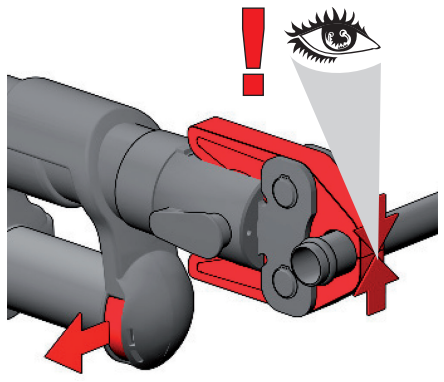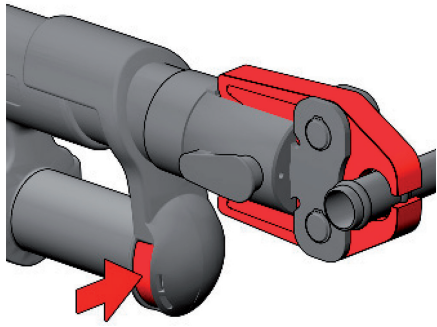

3

