

## ROWELD HE

ROWELD HE



DE Bedienungsanleitung  
EN Instructions for use  
RU Инструкция по использованию



# A Übersicht / Overview



**ROWELD HE Heizelement  $\varnothing$  120/45°**

**230V = 55518/055518Z**

**110-120V = 55517**

**ROWELD HE Heizelement  $\varnothing$  200**

**230V = 55316/055316Z**

**110-120V = 55851**

**ROWELD HE Heizelement  $\varnothing$  300**

**230V = 55317/055317Z**

**110-120V = 55854**